

# How to Refresh Your Chromebook

If you are having connection problems w/your Chromebook, it may need to be REFRESHED.

- The REFRESH button is located above numbers 3 and 4.
- Turn off your Chromebook.
- Press and hold Refresh + tap the Power button.
- When your Chromebook starts up, release the Refresh button.

