

If you are having problems with your school issued chromebooks maintaining connectivity to your home Wi-Fi after shutdown or lid closure, please try the following steps to resolve:

### Manage Wi-Fi networks


If you have multiple networks saved on your Chromebook, you can choose which wireless network the device should connect to by default.

By default, your Chromebook tries to connect to networks in this order of preference:

- Wired local area network
- Secure wireless network
- Unsecure wireless network
- Mobile data network (only used if your Chromebook has a data plan)


### Automatically connect to a network

If you have multiple Wi-Fi networks in your area, you can choose to automatically connect to a specific one:

1. Make sure you're connected to a Wi-Fi network.
2. At the bottom right, select the time.
3. Select Settings .
4. In the "Network" section, select Wi-Fi, then select your Home WiFi network.
5. Turn on Automatically connect to this network.

### Prefer a network

If you have multiple Wi-Fi networks in your area, you can tell your Chromebook to prefer one network over another:

1. Make sure you're connected to a Wi-Fi network.
2. At the bottom right, select the time.
3. Select Settings .
4. In the "Network" section, select Wi-Fi, select your home WiFi network.
5. Turn on Prefer this network.